

SZANOWNI PAŃSTWO,

dziękujemy za zakup zegarka z telefonem, który zamyka telefon komórkowy z doskonałym dotykowym ekranem w modnej formie. Zegarek z telefonem może służyć do wykonywania połączeń, odtwarzania muzyki, kontroli aktywności fizycznej itd. Przed przystąpieniem do użytkowania prosimy uważnie zapoznać się z instrukcjami i zaleceniami, aby uzyskać najlepsze rezultaty.

AKCESORIA

- Zegarek z telefonem
- Kabel do przesyłu danych
- Słuchawka
- Przewodnik użytkownika

OSTRZEŻENIA

- Z akcesoriami należy obchodzić się ostrożnie.
- Ilustracje zamieszczone w niniejszej instrukcji mają charakter orientacyjny.
- Nie należy wystawiać telefonu na długotrwałe działanie silnych promieni słonecznych. Mogą one prowadzić do przegrzania akumulatora i nieprawidłowej pracy urządzenia.
- Nie należy podejmować samodzielnych prób naprawy. Wszelkie modyfikacje mają wpływ na bezpieczeństwo produktu. Zachować ostrożność.
- Unikać użytkowania zegarka w następujących środowiskach: przy nadmiernym wahanii temperatur, w temperaturach powyżej 60°C lub poniżej 0°C, przy wysokim ciśnieniu, zapyleniu, zakłóceniach elektrostatycznych lub wilgotności.
- Unikać kontaktu urządzenia z korozyjnymi środkami czyszczącymi i substancjami chemicznymi. Zegarek czyścić miękką i suchą ściereczką.
- Produktu można używać wyłącznie ze wskazanymi akumulatorami lub zasilaczami. Inne źródła energii mogą spowodować zagrożenie i unieważnienie wszelkich licencji. Stosować wyłącznie oryginalne akcesoria zalecane przez producenta.
- Nie dopuszcza się użytkowania Zegarka z technologią Bluetooth na stacjach benzynowych, w zakładach chemicznych o ograniczonym dostępie lub w pobliżu składów paliw, ponieważ może wywołać zagrożenie wybuchem.

Ostrzeżenie: W przypadku podróży samolotem należy umieścić Zegarek z technologią Bluetooth w bagażu rejestrowanym, a nie podręcznym, ponieważ producent nie odpowiada za szkody spowodowane przez promieniowanie stosowane podczas kontroli.

INSTRUKCJE DOTYCZĄCE AKUMULATORÓW I OBCHODZENIA SIĘ Z NIMI

- Akumulatorów nie należy wyrzucać z pozostałymi odpadami. Konsument jest zobowiązany prawem do odpowiedniej utylizacji zużytych akumulatorów.
- Należy zwrócić uwagę na dodatnią i ujemną stronę akumulatora. Zamiana biegunów może uszkodzić urządzenie.
- Nie dopuszcza się prób otwierania akumulatora i wrzucania go do ognia.
- Płyn wypływający z akumulatora jest niezwykle niebezpieczny. Nie należy go dotykać bez odpowiednich rękawic.
- Nie dopuszcza do trzymania akumulatora przez dzieci.
- Wyjąć akumulator z urządzenia, jeśli nie jest używane przez dłuższy czas.


ELEMENTY URZĄDZENIA

1. Włącznik
2. Kamera
3. Wyświetlacz
4. Głośnik
5. Port USB
6. Mikrofon



PRZYGOTOWANIE DO PIERWSZEGO UŻYCIA

Ostrożnie odłączyć akcesoria od zegarka. Następnie ułożyć zegarek ekranem do dołu i otworzyć tylną pokrywę. Otworzyć kłapkę gniazda karty zgodnie ze wskazanym kierunkiem, a następnie umieścić karty SIM i SD w gniazdach i zablokować je. Po zamocowaniu kart należy poprawić połączony styk akumulatora i ostrożnie umieścić na nim akumulator. Następnie zamknąć tylną pokrywę i delikatnie docisnąć.

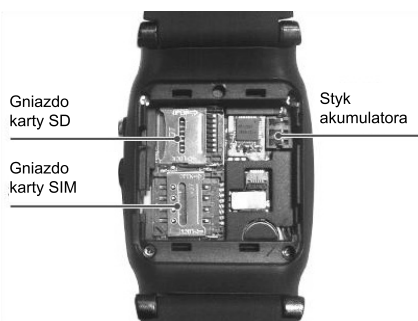

ŁADOWANIE

Przed pierwszym użyciem zegarka z telefonem należy całkowicie naładować akumulator.

PODSTAWOWE CZYNNOŚCI

Zegarek to mały telefon z ekranem dotykowym ze standardowymi funkcjami i ustawieniami.

- Każda funkcja (menu główne) jest wyświetlana na wielu ekranach po włączeniu telefonu. Inne funkcje dostępne są po przesunięciu ekranu w prawo lub w lewo.



- Podczas używania zegarka można powrócić do poprzedniego interfejsu poprzez przesunięcie ekranu w prawo i do głównego menu poprzez długie przyciśnięcie ekranu.
- Przycisk wyłącznika pozwala przejść w tryb zegarka z dowolnego interfejsu. W menu głównym tryb zegarka włącza się poprzez długie naciśnięcie ekranu. Przejście z trybu zegarka do głównego menu odbywa się poprzez długie przyciśnięcie ekranu.



Ostrzeżenie: Ekranu należy dotykać palcem lub specjalnym rysikiem, nie używać do tego celu ostrych przedmiotów, które mogą uszkodzić ekran.

WŁĄCZENIE

Przyciskać włącznik przez 3 sekundy do włączenia ekranu.

WYŁĄCZENIE

W głównym menu przyciskać włącznik przez 3 sekundy do wyłączenia ekranu.

USTAWIENIA DATY I CZASU

Podczas pierwszego użycia należy ustawić datę i czas. Można zdefiniować strefę czasową, w której znajduje się zegarek, datę, czas i inne dane. Zatwierdzenie daty i godziny następuje poprzez przesunięcie ekranu w prawo.

BLOKOWANIE I ODBLOKOWYWANIE

Na dowolnym ekranie naciśnięcie włącznika, aby przejść do trybu zegarka. Ponowne naciśnięcie spowoduje zablokowanie ekranu. Przy zablokowanym ekranie naciśnięcie włącznika, aby przejść do trybu zegarka. Długie naciśnięcie ekranu spowoduje jego odblokowanie.

POŁĄCZENIE BLUETOOTH

W menu głównym kliknąć ikonę Bluetooth, wybrać „Power on”, aby włączyć łączność Bluetooth; wybrać „my device” i wybrać połączenie ze smartfonem użytkownika spośród dostępnych urządzeń Bluetooth. Można również nawiązać połączenie ze smartfona do zegarka: Ustawić opcje Bluetooth na smartfonie na „widoczny dla wszystkich pobliskich urządzeń Bluetooth” (jeśli smartfon nie ma tej opcji, nie można jej użyć), wybrać zegarek z listy urządzeń i nawiązać połączenie.

PODSTAWOWE FUNKCJE

Połączenie można nawiązać przez zegarek lub smartfon podłączony do zegarka przez Bluetooth. Numery telefonów można zapisać na karcie SIM lub w pamięci zegarka.

Wybieranie numerów: Kliknąć w menu głównym, aby przejść do ekranu wybierania numeru i wprowadzić numer poprzez naciśnięcie odpowiednich cyfr. W przypadku wpisania złego numeru, należy dotknąć ikony aby usunąć wprowadzoną cyfrę. Aby wykonać połączenie po wprowadzeniu numeru, należy dotknąć przycisku wybierania numeru u dołu ekranu (można wybrać nawiązanie połączenia przez Bluetooth lub zegarek).



Odbieranie i odrzucanie połączeń: W przypadku połączenia przychodzącego można je odebrać poprzez naciśnięcie zielonego przycisku u dołu ekranu lub odrzucić je czerwonym przyciskiem.

Wiadomość: Funkcja ta umożliwia wysyłanie i odbieranie wiadomości tekstowych. Gdy na ekranie pojawi się ikona SMS, została odebrana nowa wiadomość.

Połączenia głosowe: Podstawowe czynności na zegarku z telefonem są takie same, jak w przypadku dotykowego telefonu komórkowego.

Połączenia głosowe przez Bluetooth: Gdy zegarek jest połączony ze smartfonem, można wykonać połączenie z zegarka lub smartfona. Gdy zegarek nie jest połączony, można wykonywać połączenia wyłącznie bezpośrednio z niego. W tym momencie można włączyć Bluetooth i wybrać urządzenie Bluetooth, z którym ma zostać nawiązane połączenie.

Wyświetlanie zegara: W menu głównym naciśnięcie krótko włącznik lub długo ekran, aby przejść do trybu zegarka. Gdy telefon jest w trybie zegarka, można delikatnie dotknąć ekranu, a zostaną wyświetlone strzałki w lewo i w prawo, którymi można zmieniać wygląd wyświetlanego zegarka.

Kamera: Zegarek może robić zdjęcia i nagrywać filmy.

Przeglądarka obrazów: Zegarek może służyć do przeglądania zdjęć. Powrót do poprzedniego menu odbywa się poprzez dłuższe przyciśnięcie ekranu.

Szybkie zdjęcie: W trybie oszczędzania energii (ekran zablokowany) podwójne dotknięcie ekranu pozwala robić szybkie zdjęcia.

Odtwarzacz video: Pozwala odtwarzać nagrane filmy.

Odtwarzacz audio: Pozwala odtwarzać muzykę z karty SD. Muzykę ze smartfona można odtwarzać po podłączeniu smartfona.

Rejestrator dźwięku: Pozwala wyraźnie rejestrować dźwięk.

Radio FM: Po podłączeniu słuchawki umożliwia słuchanie radia.

Budzik: Pozwala ustawić wiele alarmów, co ułatwia pracę i codzienne życie.

Stoper: Pozwala wygodnie mierzyć czas, umożliwia podział na okrążenia lub odninki.

Krokomierz: Może służyć jako narzędzie do kontroli poziomu wysiłku fizycznego poprzez pomiar kalorii lub ich spalania z użyciem zebranych danych takich jak liczba kroków, odległość, prędkość, czas itp.

Kontroler snu: Podczas snu zegarek wykrywa najdrobniejsze ruchy, rejestruje i analizuje jakość snu.

Ustawienia osobiste: Można tu zdefiniować płeć, wzrost, masę, datę urodzin. System monitoruje stan zdrowia, korzystając z tych danych.

Wiadomości na telefonie: Gdy na podłączony telefon przyjdą wiadomości z QQ lub innej aplikacji, zegarek przypomni o konieczności ich przeczytania.

Odnajdowanie telefonu: Naciśnięcie sprawi, że ekran telefonu zaświeci się, a urządzenie wyda dźwięk, co ułatwi jego odnalezienie.

Zdalne zdjęcia: Zegarkiem może sterować kamerą w telefonie.

Informacja: Aplikacje do obsługi wiadomości na telefonie, odnajdywania telefonu i zdalnego wykonywania zdjęć wymagają zainstalowania na smartfonie aplikacji „Bluetooth notice”. (Aplikację można pobrać po zeskanowaniu kodu QR na zegarku).

PRZYWRACANIE USTAWIENI FABRYCZNYCH

Funkcja służy do przywrócenia fabrycznych ustawień zegarka. Po wybraniu tej opcji należy podać prawidłowe hasło (domyślnie 0000).

PARAMETRY

Sieć: GSM 850/900/1800/1900 MHz
Bluetooth: V 3.0, kompatybilność z V 2.1 / V 2.0 / V1.2 / V 1.1
Kolory wyświetlacza: 16 milionów
Rozdzielczość: 240*240 pikseli
Rozmiar ekranu: 1,55"
Typ ekranu dotykowego: Pojemnościowy
Pamięć: 128+64 Mbit
Czas w trybie czuwania: 60-100 godzin
Czas rozmów: 1,5-6 godzin
Język: Wielojęzyczny
Podstawowe funkcje: Telefon GSM, Wybieranie numeru przez Bluetooth i zestaw słuchawkowy Bluetooth, Szybkie zdjęcie, Odtwarzacz muzyczny, Odtwarzacz video, Radio FM, Kamera, Rejestrator dźwięku, Budzik, Zegarek, Stoper, Krokomierz, Wiadomości na telefonie, Zabezpieczenie przed zgubieniem, Odszukiwanie telefonu, Zdalne zdjęcia, Kontroler snu itd.
Wymiary: 56*42*13,5 mm
Wersje kolorystyczne: Srebrny.

Jeśli treść niniejszej instrukcji nie odpowiada zakupionemu zegarkowi z telefonem, należy odpowiednio dostosować czynności. Producent zastrzega sobie prawo do ostatecznej interpretacji instrukcji.

DEAR SIR/MADAM,

Thank you for purchasing this type of watch phone that integrates a perfect full touch screen mobile phone into its fashionable design. With the watch phone, you can make phone calls, play music and health steps, etc.

Before operating this type of watch phone, please read the instructions and suggestions carefully to ensure the best possible performance.

ACCESSORIES INTRODUCTION

- Watch phone
- Data cable
- Earphone
- User Guide

SAFETY WARNING

- The information in this document won't be modified or extended in accordance with any notice.
- Take good care of all related accessories.
- The illustrations in this manual are for reference only, please prevail in kind.
- Be careful not to let your phone directly exposed under prolonged exposure to strong sunlight which will lead it to conduct wrong command due to battery overheating.
- Do not attempt to repair it yourself, for the modification to the product will affect the security of the product, and be careful of danger.
- Avoid using the watch in the following environment: places with excessive temperature fluctuations, places with the temperature higher than 60°C or lower than 0°C, places with high pressure, dust, electrostatic interference or high humidity.
- Avoid touching with corrosive cleaning agents and chemicals, please use a soft, dry cloth to clean the watch.
- This product can only be operated with specified batteries or power adapter, while different models may result in danger and lead this product with all relevant licenses invalid. Use only the original accessories recommended by the manufacturer.
- It is prohibited to use Bluetooth Watch at the gas stations, restricted chemical plants or near the oil depots, for the use of Bluetooth Watch in the above environment may raise the risk of explosion.

Warning: When you are travelling on the airplane, please take care to place the Bluetooth Watch in the baggage, and try not to place it in the handbag while going through the checkpoint, and the manufacturer is not responsible for the damage caused by such radiation.

INSTRUCTIONS ON BATTERIES & HANDLING BATTERIES

- Batteries are not allowed to be thrown into the trashcan. As a consumer, you are legally required to handle and collect the used batteries properly.
- Note that the battery positive and negative direction, if opposite, it may cause damage to the device.
- It is prohibited to try to open the batteries or throw batteries into fire.
- The liquid flowing from the batteries is very dangerous, and one cannot touch it unless wearing suitable gloves.
- Never place the battery in the hands of children.
- Remove the battery from the device if you do not use it for a long time.


PRODUCT DETAILS

- | | |
|-----------------|------------|
| 1. Power switch | 2. Camera |
| 3. Display | 4. Speaker |
| 5. USB port | 6. MIC |

**INITIAL PREPARATION FOR THE FIRST TIME USING THE WATCH**

Be careful to disassemble your watch and accessories, after disassembling, place the watch screen face down, and open the back cover of the watch, then open the card slot based on the direction indicated, and then lock the card after placing SIM card and SD card in the slot.

When secure the card in place, please correct the golden contact point of the battery, and gently place the battery into it, and then close the back cover and gently press it down to its place.

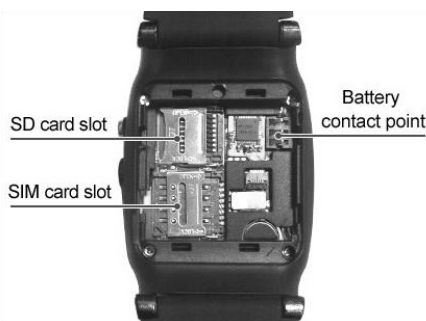
**CHARGING**

The battery should be fully charged before initial use of the watch phone.

BASIC OPERATION

Your watch is a mini touch-screen phone on which you can perform routine settings and select functions.

- Each function (main menu) will be shown and displayed on multiple screens after the phone is switched on, and other functions can be viewed by sliding the screen left or right.

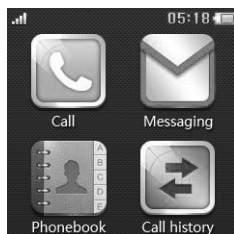

- In the course of operating the watch, you can return to the previous interface by sliding screen right, and return to main menu by long press of the screen.
- You can press the power switch to switch to clock mode in any interface; you can switch to clock mode in the interface of main menu by long press of the screen. You can switch from clock mode to main menu by long press of the screen.



Warning: Touch the screen with your fingers or a special pen when using the touch screen, and avoid use sharp objects, for sharp objects may damage the touch screen.

POWER ON

Long press power switch for 3 seconds until the screen displays.

POWER OFF

In the main menu, long press the power switch for 3 seconds until the screen disappears.

DATE & TIME SETTINGS

During the initial use, you should set up the time and date. Time zone where the watch is located, as well as the time and date and other items can be set. Swipe right to confirm the date and time.

LOCK AND UNLOCK



In any screen, press the power button to enter the clock mode, press again to lock screen. In lock screen state, press the power button to enter the clock mode, long press the screen again to unlock.


BLUETOOTH CONNECTION

In the main menu, click Bluetooth to enter, select "Power on" to turn on Bluetooth; select "my device" and select your Smartphone Bluetooth from the Bluetooth devices to be connected. You can also use Smartphone to connect to Bluetooth watch: Turn on your Smartphone Bluetooth, is set to "visible to all nearby Bluetooth devices" (If your Smartphone does not have this option is not set), select your watch from the list of search and connect to it.

BASIC FUNCTIONS

You can dial the number on this device, or dial the number with Bluetooth connected with your big Smartphone. The phone numbers can be saved in SIM card or watch.

Dial: Click  in the main menu to enter the dialing interface, and enter the number by clicking the numbers on dialing interface, if you enter the wrong number, please click  to delete previous input, and click the dial button at the bottom of the screen after completing entering the number to make a phone call (you can choose to dial by Bluetooth or this device).

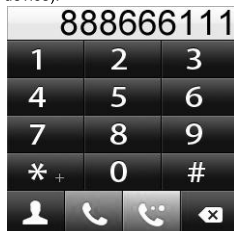

Answering and rejecting calls: When there is an incoming call, you can click the Answer button in green at the bottom of the screen to answer the call, while you can click the red button to reject the call if you are inconvenient.

Message: The function provides short message service, thus you can receive or send out text messages. When the icon of SMS status appears on the screen, it indicates that you have received a new message.

Phone calls: Basic operations of the watch phone are same with those of common touch-screen mobile phone.

Bluetooth calls: When the watch is connected with the Smartphone. You can make a dial by not connected, and you can only make a dial by turn on your Bluetooth, and select the Bluetooth from the Bluetooth devices to be connected.

Clock display: In the interface of main menu, press down the power switch quickly or long press the screen to switch to clock mode. When the phone is in clock mode, please gently touch the screen, then Left and Right arrows appear, and different clock interfaces can be set by clicking Left or Right arrow.

Camcorder: Use the watch to take photos and record video.

Image viewer: Use the watch to browse photos, when browse photos, long press the screen return to previous menu.

Snapshot: In the power-saving state (lock screen), double-click on the screen can quickly take pictures.

Video player: Play your recorded video files.

Audio player: Play music in SD card; the music on your Smartphone can be played after connecting with your Smartphone.

Sound recorder: Record sound clarity that you want.

FM radio: You can listen to the radio after plugging in the earphone.

Alarm: You can set multiple alarms, let your work and life easier.

Stopwatch: Convenient timing, you can choose lap timing or split timing.

Pedometer: It can be adopted as a tool to avoid insufficient or excessive exercise by measuring calories or calories consumption based on collected data, such as number of steps, distance, speed, time, etc., to control exercise.

Sleep monitor: When you sleep, the watch will perceive your tiny movement, record and analyze your sleep quality.

Personal settings: Set your gender, height, weight, birthday, the system will according to your personal information to monitor your health.

Remote remind: When there is incoming messages from QQ and other applications on the connected phone, the watch phone will remind you to read them.

Find phone: Click to enter, your phone will alarm and bright screen, let you easy to find.

Remote capture: Use the watch to control your phone camera.

Note: Remote remind, Find phone, Remote capture, these functions need to install "Bluetooth notice" applications on your smartphone. (Scan the QR code in the watch can download the application.)


RESTORE FACTORY SETTINGS

This function is used to recover the phone to its default settings. After the "Restore Factory Settings" option is entered, please enter correct password as required (the default password is 0000).

PARAMETERS

Network : GSM 850/900/1800/1900 MHz
 Bluetooth : V3.0, compatible with V2.1 / V2.0 / V1.2 / V1.1
 Display Type: High definition
 Display Color : 16M colors
 Resolution : 240*240 pixels
 Screen Size : 1.55"
 Touch Panel : Capacitive
 Memory : 128+64 Mbit
 Standby Time : 60~100 hours
 Talk Time : 1.5~6 hours
 Language : Multi-language
 Basic Feature : GSM Cell Phone, BluetoothDialer & Bluetooth Headset, Snapshot, Musicplayer, Video player, FM radio, Camera, Soundrecorder, Alarm clock, Watch, Stopwatch, Pedometer, Remote remind, Anti lost, Find phone, Remote capture and Sleep monitor etc.
 Dimension : 56*42*13.5 mm
 Colour : Silver, Gold, Gun Colour

If the content described in this manual doesnot match your watch phone, the watch phoneshould prevail. The manufacture reserves the GSM & Bluetooth Watch rights of final interpretation of the manual.

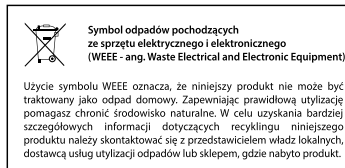

Tracer

Producent:
Megabajt Sp. z o.o., ul. Rydygiera 8, 01-793 Warszawa